QUICK REFERENCE GUIDE

GB

⚠ Attention
Please read the operating manual prior to operating the machine for the first time.

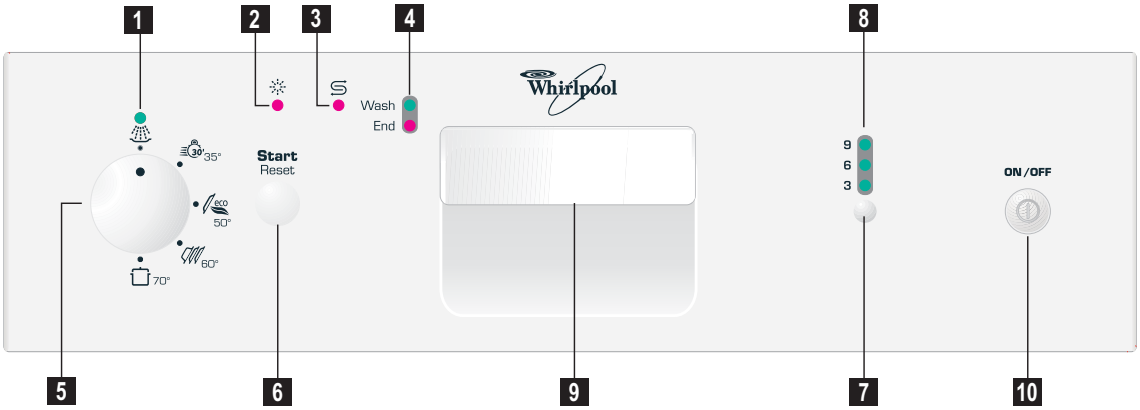

1 **On/Off indicator light**
2 **Rinse aid level indicator light**
3 **Salt level indicator light**
4 **LED progress indicator lights**
5 **Programme selection Knob**
6 **Start/Pause button**
7 **Time Delay button**
8 **Time Delay indicator lights**
9 **Door handle**
10 **On/Off button**

How to use your dishwasher:

Open the water tap.
Plug to the mains.

- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Use the on / off button to turn the machine on.
- Check the salt and rinse aid level indicator lights. If necessary, refill salt and/or rinse aid.
- Use the programme selection Knob to choose your washing programme.
- Start the programme with the Start/Stop button:

⚠ Attention
Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- Use the on / off button to turn the machine off again.
  When the progress indicator light “programme end” lights up, the programme is complete.
- Close the water tap.
  Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open.
  Unload the dishes. Begin with the lower basket.

PROGRAMME TABLE

Programme number	1	2	3 Reference **	4	5
Programme name	Pre-wash	30 Min.	Eco	Normal	Intensive
Cleaning temperature	-	35°C	50°C	60°C	70°C
Suited to	Used dishes which are to be washed at a later time	Dessert and coffee dishes with food leftovers which are not dried on	Normally dirty dishes with starch containing food leftovers which are not dried on	Normally dirty dishes with food leftovers which are not dried on	Especially dirty dishes with food leftovers which are dried on
Degree of dirtiness	-	Few	medium	medium	High
Detergents					
15 cm³	-	x	-	-	-
15-25 cm³	-	-	x	x	x
+ 5 cm³	-	-	x	x	x
Programme process	Pre-wash ▼ End	35°C wash ▼ Cold rinse ▼ Cold rinse ▼ Dry ▼ End	Pre-wash ▼ 50° wash ▼ Clear rinse ▼ Clear rinse ▼ Dry ▼ End	60°wash ▼ Clear rinse ▼ Clear rinse ▼ Dry ▼ End	50°C Pre-wash ▼ 70° wash ▼ Cold rinse ▼ Cold rinse ▼ Dry ▼ End
Duration (min)	15	30	140	58	115
Energy (kWh)	-	0,75	1,01	1,15	1,30
Water (l)	3,6	10,2	13	10,6	14,4

The consumption values shown in the table were determined under standard conditions. For this reason, deviations are possible under practical conditions.
** Reference programme for test institutes
The tests in accordance with EN 50242 must be carried out with a full salt container of the water softener, a full reservoir for the rinse aid and the testing programme.
Load capacity : 10

FUNCTION BUTTONS

Function buttons

On/off button
You turn your dishwasher on / off with this button. When turning on, the indicator light for the last used programme will light up.

Start/pause button
You use this button to start the selected programme; the light on the button lights up.
Stop the programme with the start / pause button if you would like to open the door once the dishwasher's washing programme is running.

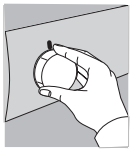

Programme selection Knob
Use the programme selection Knob to choose your washing programme.

Time delay
With the delay function of your machine, you may delay the starting time of the program up to 3-6-9 hours using the Time delay button.

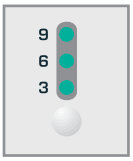

3-6-9 hours lamps will start flashing respectively, each time you press the delay button. If you press the Start/Stop button while the desired delay lamp is flashing, then the delay lamp comes on constantly and the function is saved to the memory. As of this moment, the countdown starts. Upon completion of the delay period, the delay lamp will go off and the selected washing program will start.
If you press the Delay Button when the 9 hours delay lamp is flashing, then the delay lamps goes offf. If you press the Start / Stop button when the Delay Lamps are not lit, then the selected program will start without any delay.

You may follow the remaining delay period from the delay lamps.
For example: If you select the 9 hours delay option, then the 6 hours lamp will come on when there is 6 hours remaining to the start of washing program and 3 hours lamp will come on when there is 3 hours remaining.
Changing the delay period
Press Start/Stop button. The Delay period lamp will start flashing. You may choose the new delay time by pressing the delay button again.
Press Start/Stop button again to save the setting.

Canceling the delay function
Keep the Start / Stop button pressed for 5 seconds. The selected delay period will be cancelled.
As soon as the canceling starts, the water that may be remained in your machine will be drained for 30 seconds due to safety reasons.

How to cancel the washing programme
To cancel a programme while the machine is operating:
Press start/stop button for 3 seconds. The machine will drain the water inside the machine for 45 seconds. The programme is cancelled when washing light goes off. Then, you can choose and start a new programme.

! Important: Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

How to change the washing programme
To change the programme selection while the machine is operating:
Press start/stop button. The washing light will go off.
Select the new programme. Press start/stop button. The washing light will be on and new programme will start.

! Important: The new programme will NOT right from the beginning. It will start from the stage last carried out by the previous programme selection.

Control indicator lights

1 Programme selection

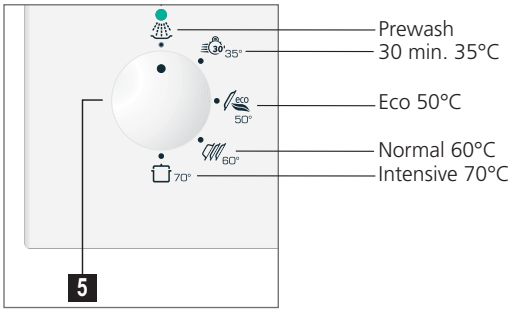

2 Rinse aid level indicator light

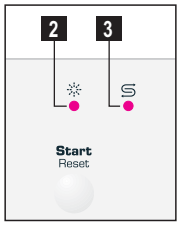

If this indicator light comes on, you have to refill rinse aid.
You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.
When the colour is light, open the dispenser and refill rinse aid.

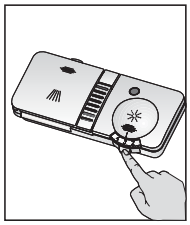

3 Salt level indicator light

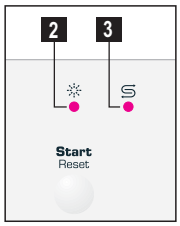

When this indicator light comes on, you must refill special salt.
In machines which do not possess an electrical salt indicator, the salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container.

When the colour is light, open the container and add dishwasher salt.

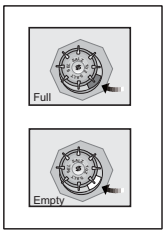

4 LED progress indicator lights

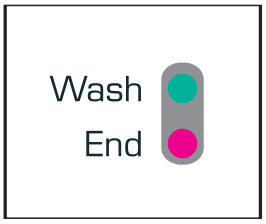

The programme sequence throughout the washing process can be monitored from the progress indicator lights on the control panel.

⚠ Following the washing stage, in order to drain and remove water from inside the machine completely, the machine will pause for approximately 35 minutes. Do not worry this is not a fault. Then End progress indicator light will come on.

⚠ Do not switch the machine off before End light comes on.

Note for Testing Institutes
The necessary information for performance testing will be provided upon request. The request can be done by e-mail through:
dishwasher@standardloading.com

Please do not forget to write the model code and stock code information of the appliance besides your contact information in the e-mail. The model code and stock code information can be found on the rating label, which is placed on the side of the door.